

[Select a Product](#)[Answer Navigator](#)[Find an Answer](#)[Ask a Question](#)

How to register/change/delete an e-mail destination in the Address Book

Published 05/21/2006 11:09 PM | Updated 12/22/2017 01:00 PM | Answer ID 13033

[QR Code](#)

Other users found this answer helpful

 Yes 43

[Rate this answer](#)

 Share  Print  Email this page

 
How do I register, change, or delete an e-mail destination in the Address Book?

Register e-mail destinations so you do not need to enter an e-mail address every time when sending scanned files from scanner or fax function.

Follow these steps:

Registering an e-mail destination

1. Press the **[User Tools/Counter]** key.

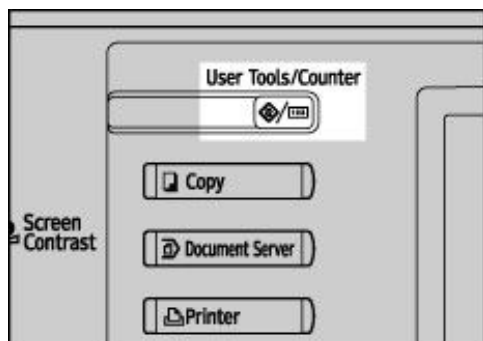


2. Press **[System Settings]**.



3. Press **[Administrator Tools]**.
4. Press **[Address Book Management]**.
5. Check that **[Program / Change]** is selected.
6. Select the name whose e-mail address you want to register. Press the name key, or enter the registered number using the number keys.
7. Press **[E-mail]**.
8. Press **[Change]**.



 9. Enter the e-mail address.

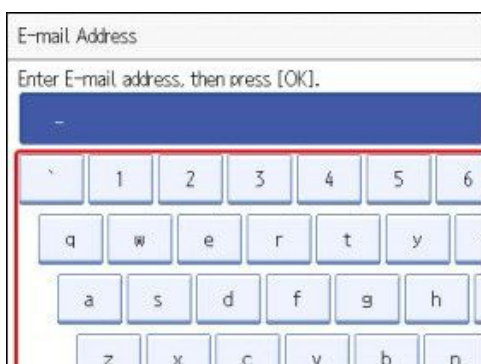

10. Press **[OK]**.
11. Select **[E-mail / Internet Fax Destination]** or **[Internet Fax Destination Only]**.
12. If you want to use internet fax, specify whether or not to use **Send via SMTP Server**.

13. Press **[OK]**.

Note/Important

- You can enter up to 128 characters for the e-mail address.

[Page Top](#)

Changing a registered e-mail destination

Deleting a registered e-mail destination