

[Select a Product](#)[Answer Navigator](#)[Find an Answer](#)[Ask a Question](#)

How to print a configuration page

Published 09/03/2008 03:57 AM | Updated 12/22/2017 04:45 PM | Answer ID 91880

[QR Code](#)

Other users found this answer helpful [Yes 2](#) [Rate this answer](#)

[Share](#) [Print](#) [Email this page](#)

How do I print a configuration page?

To print a configuration page, follow these steps.

1. Press the **[User Tools/Counter]** key.
2. Press **[Printer Features]**.
3. Press **[Configuration Page]** on the **[List/Test Print]**.

The configuration page is printed.



4. Press the **[User Tools/Counter]** key.

Interpreting the configuration page

The contents of the configuration page are as follows.

System Reference

- Unit Number
Displays the serial number assigned to the board by its manufacturer.
- Total Memory
Displays the total amount of memory (SDRAM) installed on the printer.
- Firmware Version
 - Printer
Displays the version number of the printer firmware.
 - System
Displays the version number of the system firmware.
 - Engine
Displays the version number of the printer engine.
 - LCDC
Displays the version number of the panel display.
 - NIB
Displays the version number of the Network interface.
- Device Connection
This item(s) appears when the device option(s) is installed.
- HDD: Font/Macro Download
Displays the capacity of the hard disk drive.
- Printer Language
Displays the version number of the printer driver language.
- Attached Equipment
Displays the installed optional equipments.
- Consumption Status
Displays the status of consumable.

Paper Input

Displays settings made under Tray Paper Settings menu.

Maintenance

Displays settings made under the Maintenance menu.

System

Displays settings made under the System menu.

PCL Menu

Displays settings made under PCL Menu.

PS Menu

Displays settings made under PS Menu.

PDF Menu

Displays settings made under PDF Menu.

Host Interface

Displays settings made under the Host Interface menu.

When DHCP is active on the network, the actual IPv4 address, subnet mask and gateway address appear in parentheses on the configuration page.

Interface Information

Displays the interface information.